

FUEL STAINER TO FUEL PUMP CONVERSION

Strainer

Fuel Pump Used with

PS1001	FP1311, FP1313, FP1334, FP1336, FP1338, FP1339, FP1340, FP1341, FP1435, FP1436
PS1002	FP1311, FP1313, FP1336, FP1338, FP1339, FP1340, FP1341, FP1435, FP1436, FP1690
PS1003	FP1334, FP1336, FP1338, FP1339, FP1436, FP1856
PS1004	FS1311, FP1336, FP1338, FP1339, FP1779
PS1006	FP1311, FP1313, FP1334, FP1336, FP1338, FP1340, FP1341, FP1435, FP1436
PS1007	FP1341, FP1349
PS1008	FP1311, FP1334, FP1338, FP1339, FP1349, FP1435, FP1436
PS1009	FP1344, FP1348
PS1010	FP1337, FP1690
PS1012	FP1655, FP1690
PS1013	FP1522
PS1014	FP1002, FP1003, FP1019, FP1028, FP1034
PS1015	FP1519, FP1525
PS1016	FP1655
PS1017	FP1337, FP1655
PS1019	FP1655
PS1020	FP1337, FP1655, FP1690, FP1770
PS1021	FP1337, FP1655, FP1690, FP1771
PS1022	FP1655
PS1025	FP1018, FP1033
PS1026	FP1002, FP1018, FP1019, FP1033
PS1029	FP1526
PS1030	FP1309, FP1765, FP1774, FP1803, FP1839
PS1065	FP1754, FP765
PS1066	FP1655
PS1031	FP1754, FP1765, FP1774, FP1839, FP1872
PS1067	FP1765
PS1032	FP1770
PS1033	FP1770
PS1034	FP1770
PS1035	FP1770
PS1036	FP1309, FP1765, FP1803
PS1038	FP1309, FP1765, FP1839
PS1039	FP1770, FP1804 incl. in pump
PS1042	FP1754
PS1043	FP1690, FP1765
PS1044	FP1765
PS1046	FP1765, FP1839
PS1050	FP1309, FP1839,
PS1051	FP1309, FP1765, FP1839, FP1895
PS1053	FP1256, FP1259, FP2389, FP1309, FP1314
PS1054	FP1765, FP1774,